

INSTRUCTION MANUAL



PHST

Table Built-In Mounting Frame for PHSE

This manual corresponds to the following reference:

PHS-STA

Packing List

The following items should be included:





Table Built-In Mounting Frame for PHSE1 unit

Windowed Cover for PHSE 1 unit



Small Cover for PHSE 1 unit



Screws 4x20 6 units



Manual 1 unit

Ref. 0019676



Features

PHST comes with four covers, which can be used interchangeably depending on your needs. See the different usage options on the next page.






- Cover for Console:



- Windowed Cover for PHSE:



- Small Cover for PHSE:





Table-Built-In Panel for PHSE is designed to accommodate the preheater unit and its console and to be integrated into the workbench.

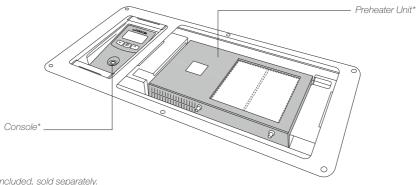

Options

Cover and protect the work space using the different covers provided with PHST.


The console can be covered by the console cover. For the other tree covers see the following usage options:

Option 1:

If no work is being carry out, the entire preheater area can be covered. The cover protects the preheater and keeps more space free on the workbench.



Attention! Preheater must be switched off and cooled down before putting the cover on.

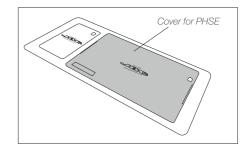


Option 2:

While working with the preheater, the side area next to the heating zone can be covered using the windowed cover for PHSE.




Be careful the cover can be hot.

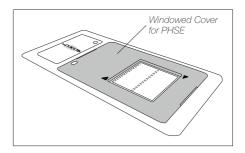


Option 3:


While working with the preheater and the support, the side area next to the support can be covered using the small cover for PHSE.

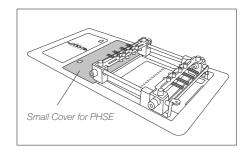



Note: If the preheater is used the other way round, all preheater covers can also be fitted the other way round.

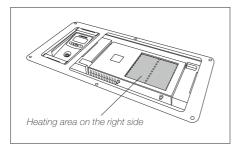

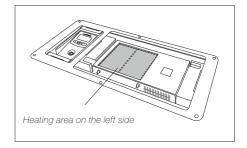

Assembly

To assemble the frame in your workbench it is needed to cut an opening into your workbench.





The dimension for the opening can be find on the next page.

Fit the frame into the opening and fix it to your workbench with the supplied screws.

Cutout Scheme


To install PHST in your workbench, it is necessary to make a cutout of the indicated dimensions.

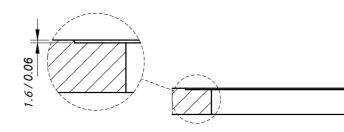

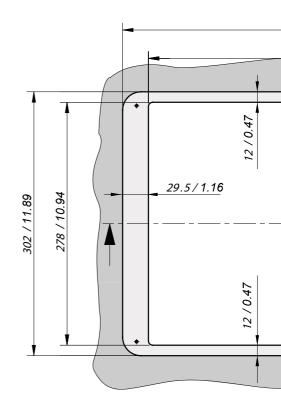

mm/in



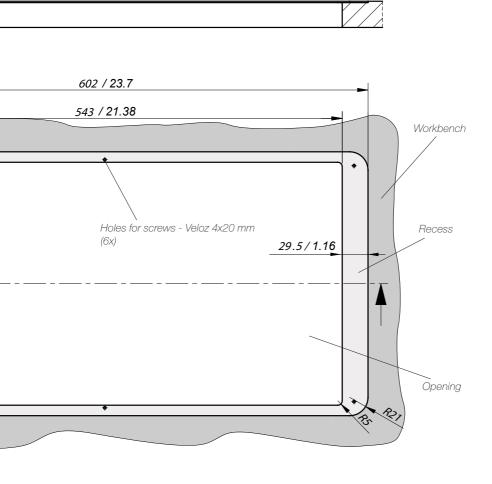

Specifications

PHST

Table Built-In Mounting Frame for PHSE Ref. PHS-STA

- Net Weight: 6.50 kg / 14.33 lb

- Product Dimensions: 602 x 302 mm (L x W) 23.7 x 11.9 in

- Package Dimensions / Total Weight: 640 x 350 x 120 mm / 7.76 kg
(L x W x H) 25.2 x 13.78 x 4.72 in / 17.11 lb

Complies with CE standards. ESD Safe.



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labor.

Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

